

Hand dryer

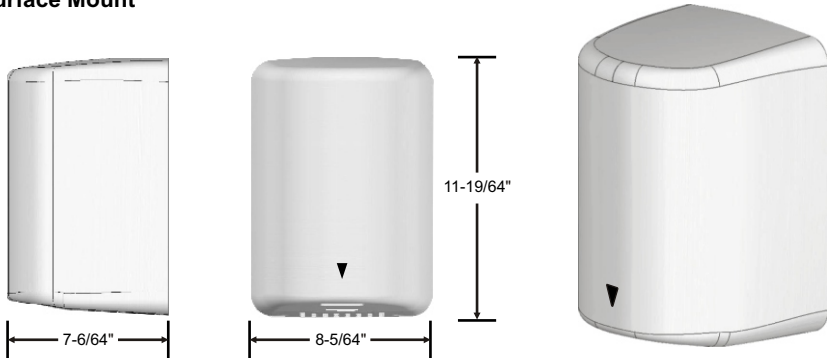
Automatic



HIGH SPEED

Operating Instructions and Parts Manual (Automatic)

Surface Mount



TECHNICAL SPECIFICATIONS

ITEM CATEGORY	PERFORMANCE DATA
Operating Voltage	110-120 Vac, 50/60 Hz, 1.34-1.6 kW 220-240 Vac, 50/60 Hz, 1.34-1.6 kW
Warm Air Speed Output	169-225 mi/hr (75-100 m/s), adjustable
Air Output Temperature	131 °F (55 °C) – Ambient Temp. 77 °F (25 °C)
Dryer Shall Deliver	73.9 CFM (125.5 m³/h)
Motor Type	350-700 W, 12000-18000 R.R.M., Adjustable Brush Type, Dual Ball Bearings
Motor Thermal Protection	Auto Resetting Thermostat turns unit off, 120V at 275°F (135°C), 240V at 203°F (95°C)
Heater Element	450-900 W, adjustable
Heater Thermal Protection	Auto Resetting Thermostat turns unit off at, 185°F (85°C) Thermal fuse cuts unit off at 142 °C [288 °F]
Drying Time	Less than 15 seconds
Stand-by Power	Less than 0.5W
Circuit Operation	Infrared Automatic, self adjusting
Sensor Range	4" to 9" [100 mm to 230 mm], adjustable; standard 6.69" [170 mm ± 20 mm]
Timing Protection	60 seconds auto shut off
Drip proof	IPX1 ♠
Isolation	CLASS 1
Net Weight	12.8 lbs (5.8 kg)
Shipping Weight	14.6 lbs (6.6 kg)
Unit Size	8-5/64" W x 11-19/64" H x 7-6/64" D [205 mm x 287 mm x 180 mm]

COVER TYPE/ COVER FINISH

- ATC-ZA01: White porcelain enameled coating. (t:1.6 mm)
- ATC-ZA05: Stainless Steel; Satin finished. (t:1.5 mm)
- ATC-ZA05-UB: Stainless Steel; Satin finished without brand. (t:1.5 mm)

General safety information

⚠ WARNING This product is intended for installation by a qualified service person. Use AWG No. 16 solid conductor for wiring.

⚠ DANGER Failure to properly ground unit could result in severe electrical shock and/or death.

⚠ WARNING Disconnect power at the service breaker before installing or servicing. NOT FOR HOUSEHOLD USE - MAY CAUSE BURNS. " IMPROPRE A L'USAGE DOMESTIQUE - PUEUT OCCASIONNER."

⚠ WARNING All units must be supplied with a 3-wire service. The ground wire must be connected to the dryer's backplate.

-- NOTE: Do not install dryer over washbasin --

Type Y attachment

If the power supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.

Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules

Installation

1. Make sure power supply breaker is switched off. Installation must be carried out in accordance with the current edition of the local wiring regulations code having jurisdiction. Installation should be performed only by a qualified electrician.
2. Place template against wall at desired height (see mounting height recommendations) and mark locations of 4 mounting holes and wire service entry at knockout (KO) location.

Note: For two or more dryers, dryers should be no closer than 24 inches (610 mm) on center.

3. Remove and retain 2 cover screws and cover.
4. Connect supply wires to terminal block where indicated and connect ground wire to base plate with ground screw

Connections :

- A. Connect the live wire (colored red or brown) to the terminal block marked "L".
- B. Connect the neutral wire (colored black or blue) to the terminal block marked "N".
- C. Connect the ground wire (colored green or green and yellow) to the green screw marked "Ⓧ".

Note that colors of live and neutral wires depend on voltage of supply service.

5. Replace cover. Do not over-tighten screws.

Recommended mounting heights

- from bottom edge of dryer above finished floor (AFF)

Men's	43"	109 cm
Ladies	41"	104 cm
Children, ages 11-17	39"	99 cm
Children, ages 3-10	33"	84 cm
Handicapped	35"	89 cm

Operation

- No-touch operation.
- Shake excess water from hands.
- Place hands under the outlet to start operation.
- Rub hands lightly and rapidly.
- Stops automatically after hands are removed.

Cleaning and Maintenance

Periodic cleaning of the unit is recommended to ensure optimum performance.

- Disconnect the electrical supply.
- Remove the two cover-mounting screws.
- Remove the cover.
- Clean all dust lint from the interior of the dryer.
- Wipe the cover with a damp cloth and mild cleaning solution. Do not Soak. Never use abrasives to clean the cover.
- Replace the cover. Do not over tighten the screws.
- **Inspect the motor brushes annually or as required, replace worn brushes.**

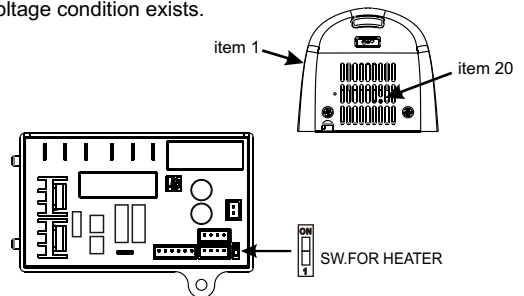


Warm air speed adjustment

Use flat blade screwdriver small enough to fit through access hole {Ø4,8mm [Ø3/16"]} in bottom grille of cover (item 1). The adjustment potentiometer (item 20) is visible through the slots of the grille. With respect to axis of screwdriver viewed from handle end, gently turn adjustment potentiometer shaft clock-wise [CW] to increase power to maximum (shaft will hard stop; DO NOT OVERTURN!). Turn tool gently CCW to reduce power as required (shaft will hard stop; DO NOT OVERTURN!). Note that at minimum power the unit may not start if low line Voltage condition exists.

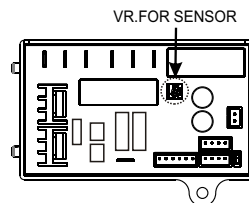
Heater Element Switch ON/ OFF

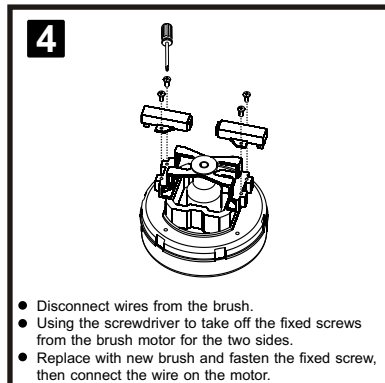
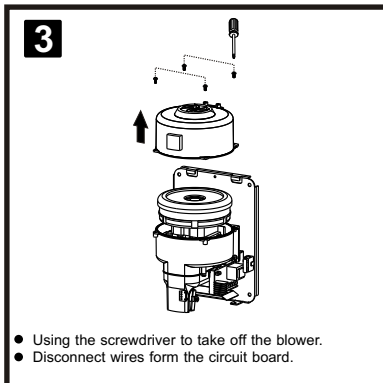
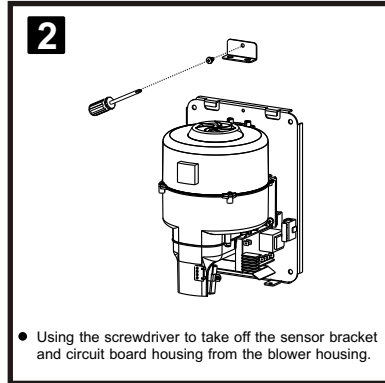
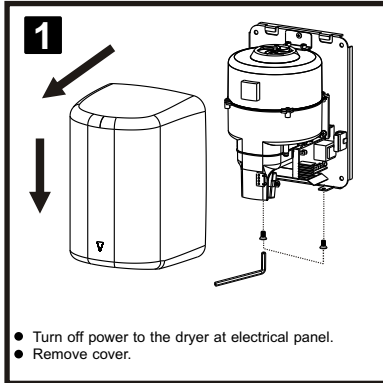
1. Cut off the power, loosen the screw of the cover and remove the cover.
2. Adjust the heater switch on the PCB with a flathead screwdriver.
 - 2.1. Turn the switch to "ON" : heater on.
 - 2.2. Turn the switch to "1" : heater off.



Sensor range adjustment

1. The ranger 4" to 9" [100 mm to 230 mm], standard 6.69" [170 mm ± 20 mm]
2. Clockwise: Lengthen the sensing range(+)
3. Counterclockwise: Shorten the sensing range(-)
4. **DO NOT OVERTURN!**



Brushes Replacement**THIS UNIT MUST BE FITTED AND SERVICED BY SUITABLY QUALIFIED PERSONNEL**

Diagnostics and Remedies

Symptom

If the dryer will not run

The dryer cycles by itself or runs constantly

The dryer makes a loud Noise and does not run for a complete cycle

The dryer runs but air stream is low pressure and/or low velocity

Corrective Actions for Initial Installation Failures

First ensure that the breaker supplying the dryer is operational. If it is, disconnect the power and remove the dryer cover. Taking suitable precautions to avoid shock hazard, reconnect the power and check for Voltage at the terminal block. Verify that connections are made correctly. Adjust the VR to make sure it is not set too low.

Ensure that there is no obstruction on or in front of the IR sensor. Clean any dirt or debris off the sensor lens. If problem persists, replace sensor.

Ensure that the supply Voltage is correct. Dryer will make a loud humming noise if the input Voltage is too high. Verify Voltage requirement on unit rating label and correct supply as required. If CBM has been damaged, replace CBM, IR sensor module and VR component and cable.

Ensure that the supply Voltage is correct. Dryer will run weakly if the input Voltage is too low. Verify Voltage requirement on unit rating label and correct supply as required.

Symptom

If the dryer will not run

The IR sensor only "sees" close range objects

The heater gets hot but no air stream is produced

The dryer only blows cold air during a full cycle

The air stream is low pressure and velocity

Corrective Actions for In-Service Failures

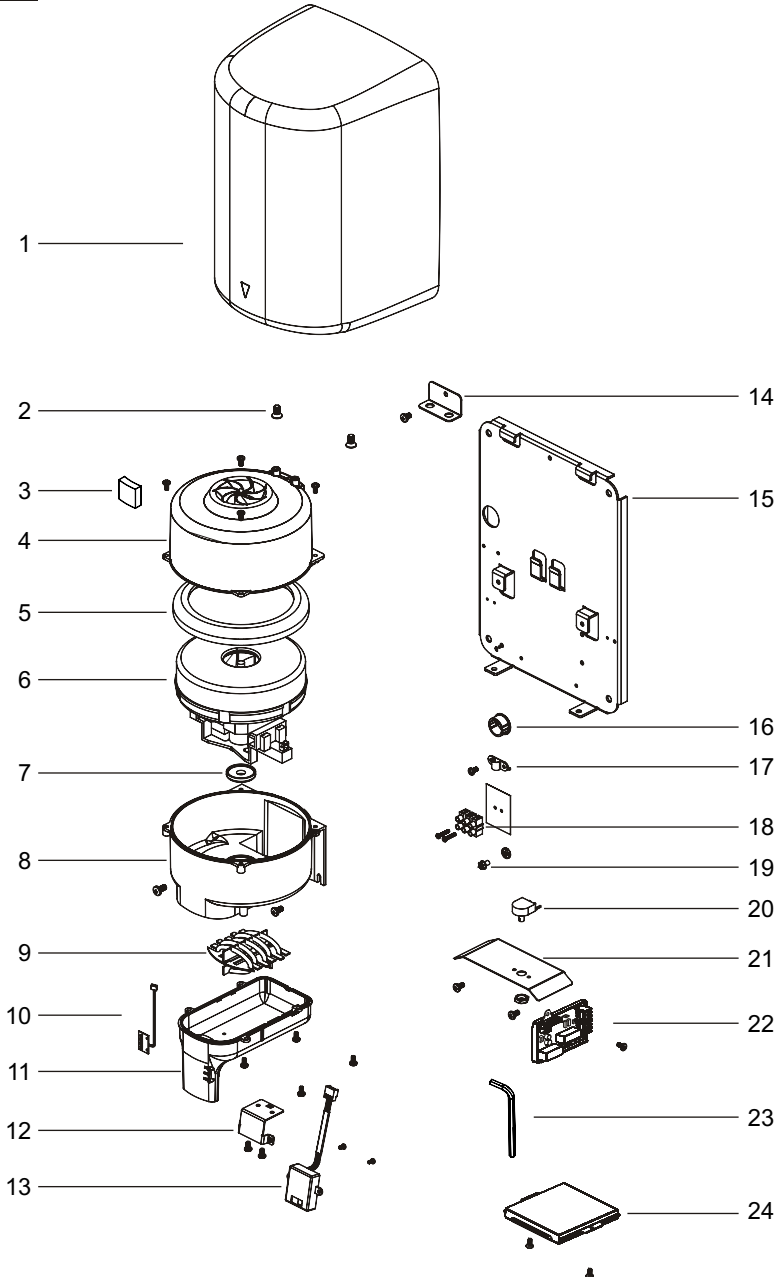
First ensure that the breaker supplying the dryer is operational. If it is, disconnect the power and remove the dryer cover. Replace the CBM and IR sensor module. Test the VR for open circuit (see Technical Specifications for value). Replace VR if $\Omega = \infty$. Taking suitable precautions to avoid shock hazard, reconnect the power and check for Voltage at the terminal block.

Ensure that there is no obstruction on or in front of the IR sensor. Clean any dirt or debris off the sensor lens. If problem persists, disconnect the power and remove the dryer cover. Taking suitable precautions to avoid shock hazard, reconnect the power and try carefully adjusting the sensitivity control (yellow shaft in blue box on CBM) to increase the sensing range. If problem persists, replace sensor.

Disconnect the power. Remove the dryer cover and disassemble the blower-motor/fan housing. Replace the fan motor.

Disconnect the power. Remove the dryer cover and disassemble the blower-motor/fan housing. Test the thermostat for open circuit. Check the heater element for signs of burning or breakage. Damaged element must be replaced.

Check the output nozzle for obstructions. If none are present, disconnect the power. Remove the dryer cover. Remove any dust/lint buildup from intake vent slots. Disassemble the blower-motor/fan housing. Check the motor brushes for worn condition ($\leq 25/64$ " [10 mm] graphite remains) and replace them, if necessary.

Diagram

Repair parts list

Key	Description
1	Steel - White porcelain enameled Stainless Steel - Satin finish Stainless Steel - Satin finish (without brand)
2	Security hex screw (2 reqd.)
3	Shock absorber
4	Blower housing - Top
5	Motor rubber - Large
6	Motor 110-120Vac 700W Motor 220-240Vac 700W
7	Motor rubber - Small
8	Blower housing - Bottom
9	Heater element 120Vac 900W Heater element 240Vac 900W
10	LED assembly
11	Air outlet
12	Sensor bracket
13	Sensor module
14	Blower housing bracket
15	Base plate
16	Nylon hole bushing
17	Cable clamp
18	Terminal block
19	Grounding screw
20	VR (variable resistance)
21	VR bracket
22	Circuit Board Module - 110-120Vac Circuit Board Module - 220-240Vac
23	Security hex wrench
24	Filter assembly